

# Programming Menu for SOMMER Keypad

## Step 1: Keypad activation (first use)

1. Press the **M** button on the Keypad until red LED lights up (8sec.)

## Step 2: Programming Access Code

1. Press the **P** button on the Keypad
2. Press the first button of your access code
3. Press the **P** button on the Keypad
4. Enter entire access code
5. Press the **P** button again to complete the programming

## Step 3: Programming Keypad to Power Head

1. Press the learn button on the power head once (solid LED)
2. Enter immediately the entire code on the Keypad

## Changing the access code:

1. Press the **P** button on the Keypad
2. Enter existing access code
3. Press the **P** button
4. Enter new access code
5. Press the **P** button again to complete the programming

## Erase memory from Keypad:

1. Press the **M** button on the Keypad
2. Press the **P** button
3. Enter reset code (9-digits), see adhesive label
4. Press the **M** button
5. Press the **P** button

LEDs 1+2 are lid for 2 seconds and all previous access codes are now deleted from the Keypad.

Please note the keypad will still transmit the first digit from the original entry code to the opener.

In order to delete the radio code:  
Press and hold learn button on the power head until LED is flashing (approx. 7 sec.)

Press desired Keypad button. It will delete the first digit from the entry code.

**We strongly suggest attaching the reset sticker to the power head!**



03/2010. Literal errors, errors and technical changes excepted.

# SOMMER

Visit our homepage: [www.sommer-usa.com](http://www.sommer-usa.com)

SOMMER USA, Inc.  
3308-C Oak Lake Blvd. • Charlotte, NC 28208  
Toll Free: 877 - 766 - 6607  
Phone: 704 - 424 - 5787  
Fax: 704 - 424 - 7699  
Mail: [info@sommer-usa.com](mailto:info@sommer-usa.com)